




END CAP

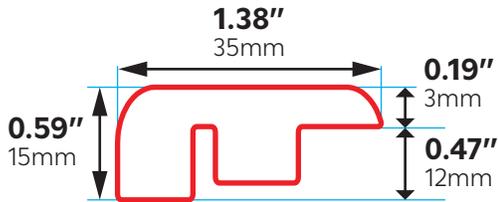


QUARTER ROUND

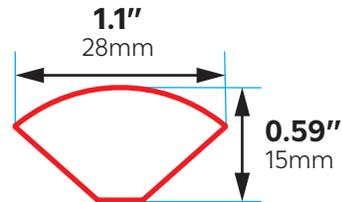


FLUSH STAIR NOSE

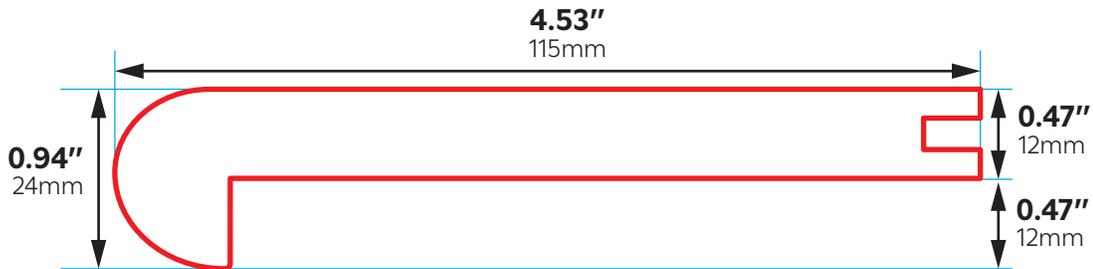

REDUCER


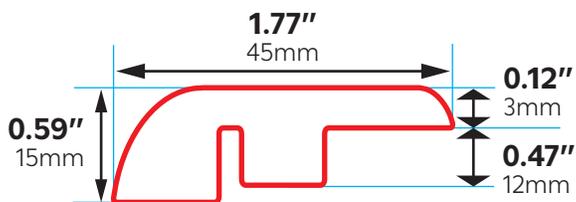


T-MOLDING

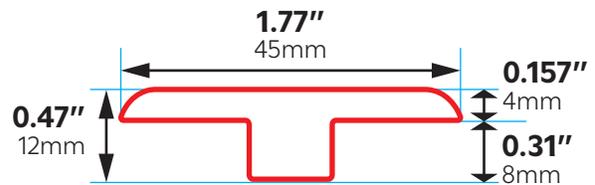


END CAP


Apply curing glue on the reverse side.

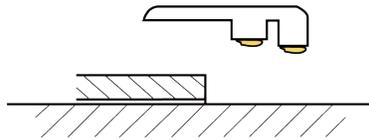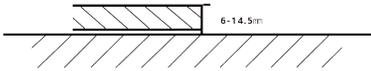


Press and fix until the glue is cured.

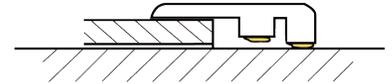


QUARTER ROUND

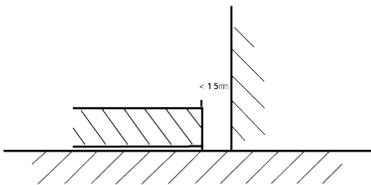

Apply glass glue on the reverse side.

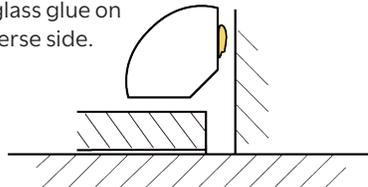


Press and fix until the glue is cured.

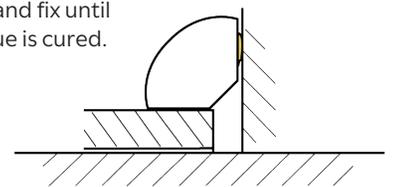


FLUSH STAIR NOSE

Apply curing glue on the reverse side.

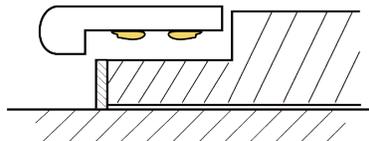


Press and fix until the glue is cured.


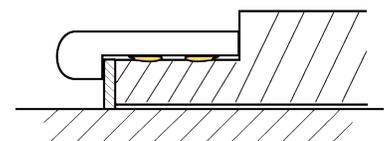


REDUCER

Leave 15-35mm gap for Reducer

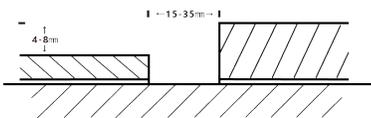


Apply curing glue on the reverse side.

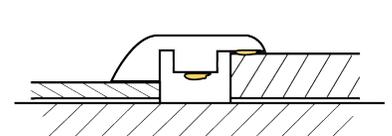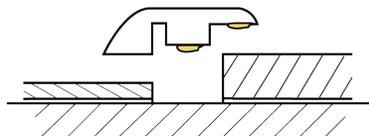


T-MOLDING

Leave 15-35mm gap for T-Molding

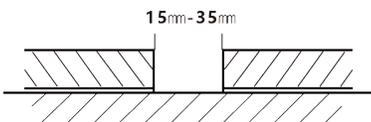

Apply glass glue on the reverse side.

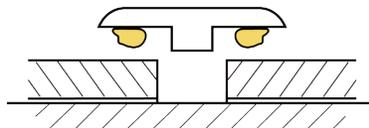

Press and fix until the glue is cured.

