

WPL MERCURY

SPEC SHEET

SWISS MADE

COLORS

--- NOVA WHITE



LF-PARMERNOV

— COSMIC OAK



LF-PARMERCOS

- ORBIT OAK



LF-PARMERORB

VENUS MIX GRAY



LF-PARMERVEN

QUANTUM BROWN



- SKY GRAY



LF-PARMERSKY

— GALAXY GRAY



LF-PARMERGAL

SOLSTICE GOLD



LF-PARMERSOL

PRINCIPAL SPECS



Waterproof Performance



Anti-Scratch



Patented Tight-Lock



AC5 Rating Commercial



Authentic Finish Feels Real



35 Years Residential Limited Warranty



Gray Core



Lowest **Emissions**



5 Years Commercial Limited Warranty



4-Side V Joint



Anti Static



Made in Switzerland

ACCESSORIES



Flush stair nose square (FSN)



Multipurpose (MP)




T-Molding (TM)



(ST)

FLOOR STRUCTURE

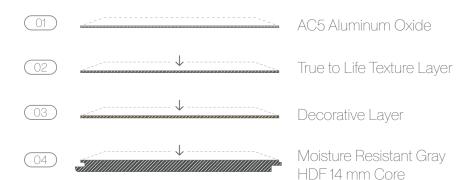

SPECIFICATIONS

COLLECTION	MERCURY
FINISH	MATT TEXTURED
EDGE TYPE	V-GROOVE
INSTALLATION TYPE	FLOAT OR GLUE DOWN
WATER ABSORTION	≤0.5%
THICK	8MM
WIDTH	9-5/8"
LENGTH	54-3/8"
WEAR LAYER	USAGE CLASS AC5
UNIQUE PLANKS	8
PLANKS/BOX	6
SQFT/BOX	21.75
BOX/PALLET	60
BOX WEIGHT	33
WEIGHT/PALLET LB	2,100
PALLET SIZE L x W x H	55" x 31" x 44"
PALL/20° FCL	27-40'
RESID. WARRANTY	35 YEARS
COMM. WARRANTY	5 YEARS
FORCE OF BREAKAGE	N/A
RESISTANCE TO THE FELXION	N/A
RESISTANCE TO ABRASION	AC5
FROST RESISTANCE	N/A
RESISTANCE TO THE SLIDING	R9
FIRE RESISTANCE	EN 13501-1: Cfl-S1
FRICTION COEFICIENT	≤0.42%
ACIDS AND BASICS	N/A
CARB 2 CERTIFIED	Ü
BREAKING STRENGTH	N/A
COEFFICIENT TO STATIC FRICTION	N/A
MADE IN	SWITZERLAND

INSTALATION INSTRUCTIONS

Parkay Mercury WPL - Laminate Series

- Flooring needs to be acclimated. Stored flat and fully supported during shipping and storage. Allow product, in an unopened package, to condition in the room where installation is to take place at a constant temperature between 68°F and 77°F or 20° 25°C for a period of 48 hours prior to installation.
- 2 Check flooring for possible defects prior to the installation. Complaints can only be accepted before installation. Slight variations in color and textures are designed to enhance its natural appearance. Mixing planks, from 3 to 4 different boxes creates a more realistic look.
- 3 Be aware that when exposed to excessive temperatures and direct sunlight flooring will expand and contract causing problems with the locking system. Please consider these exposures when choosing the area to install your flooring.
- 4 Flooring is not recommended to be installed in facilities with walkers, wheelchairs or extended care use, or in facilities with movement of heavy displays, racks, dentist chairs etc. Do not fix or place any extremely heavy object on top of this floor. All these types of installations and cases may exert extreme stress and compromise the locking system of the flooring. Chair mats must be used under office chairs.
- 5 Subfloors must be clean of debris, structurally sound, solid, stable, level, plumb, to ensure no more than 3/16" unevenness per 10-foot span.
- 6 Subfloors presenting vapor emotions between 2.5% to 5% (CM-Method), must install a 6mil Poly-plastic block before laying the cushioned underlayment. All concrete subfloors must use plastic block for extra moisture protection. Parkay Floors recommends "Polyguard 6" as the ideal poly block to protect against moisture.
- 7 A cushioned underlayment is required when installing flooring. Underlayment/Foam must be between 2mm and 3mm thick. Parkay Floors® recommends "Sound Guard PRO" as the ideal underlayment when requiring a sound proof.
- 8 Flooring can be installed over existing firm floors (Linoleum, PVC), non-grout separation tile floors, but all wood or laminate floors must be removed.
- 9 Since this floor requires a floating installation, a minimum expansion gap of 1/2" must be left along the entire perimeter of the area and fixtures, to allow expansion.
- 10 Any flooring area exceeding 1,225 Square Feet and/or 35 Linear Feet must use transition moldings.
- 11 A maximum of 10% sheen variation in between planks is consider normal.

- Flooring is not recommended to be installed over any electrical radiant heating systems. Only radiant heated system using water are recommended. Max heating temperate must not exceed 81°F. These Instructions must be followed:
 - > Before installing, make sure to test the heating system at its maximum capacity to force out any residual moisture and to make sure it's working properly.
 - > Moisture content on screed must not exceed 1.5%.
 - > Shut down the heating system at least 48 hours prior to installation.
 - > Keep room temperate between 68°F and 77°F during the installation.
 - > After flooring is install, turn on the heating system gradually, from minimum to maximum within 1-hour period.
- Agree with the client on which direction the floor boards should run since this influences the visual size ratio of the space.
- Pre-plan the floor by measuring the room first. If the width of the last row is less than 2" (5cm) saw the first and the last plank in equal width.
- Snap the lines on the substrate to identify the layout reference points. Planks should be set using this reference to ensure boards are aligned and will lock together correctly.
- 16 The use of pull bar and tapping block is recommended to ensure a successful install.
- 17 Flooring provides a very tight fit. Proper care must be used to ensure all seams are tight at end of install. An unprofessional installation or use of improper tools can result in damage to the Click profiles. Do not lean boxes or planks on a vertical position against the floor, since it might brake the click system.
- 18 If more than 5% of the product pulled out of the cartons is showing defects, stop the installation immediately and contact your, Parkay ® representative.
- 19 Product cannot be used for exterior applications. Never install on ceilings or countertops.

Flooring can have slight color variations in between production runs. Before starting the installation, it is best to check the production run # which is indicated on the label on the carton. If you find that you have cartons from different production runs, it is highly recommended that you open cartons and install a mix of planks from each different production run on your floor. This will result in a more natural looking floor.


HOW TO INSTALL

Material required

- > Calcium Chloride Moisture Test.
- > Underlayment Foam (2mm to 3mm thickness).
- > 1/2" Thick Spacers.
- > 100% Transparent Silicon Sealant.
- > PE Foam Backer Rod
- > Finish Putty and felt pads for under furniture.

STEPS TO FOLLOW

Parkay Mercury Collection WPL

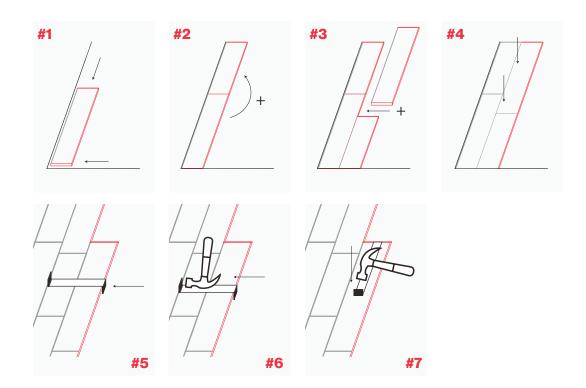

- Start with the first plank in the left corner of the room, tongue-side facing out from the wall to the length and to the right on the width. Work from left to right.
 - > Add spacers in between the plank and the wall to create a 1/2" expansion gap.
- #2 Position the following planks as an exact extension of the first one.
 - > Cut to fit the last plank of the row. To do this you can use a laminate flooring cutter (Raptor M13 Laminate floor guillotine) or a miter saw to cut thru the plank at the appropriate point.


- Begin the second row with the cut-off end to start the next and subsequent rows. Allow at least a 6" stagger for the end seams. For positioning the planks together, starting with the first board in the row, raise the plank at a 45-degree angle, insert the lengthways tongue into the lengthways groove and lower the sheet while holding the two together until they are flat and tightly together. Close the join using hand pressure or tapping block or pull bar.
- Lever the next plank in place from the front side, so that only a very short distance remains for it to be pushed into the lengthways connection.
- **#5 67** Raise the plank slightly and push it into the lengthways tongue, first close to the front connection then the rest. Make sure seams are tight on ends and sides using a pull bar or tapping block before proceeding. Continue the installation to the last row of planks, as described.

People can walk on the flooring immediately after the installation. Remove the wedges. Nail or screw moldings to the wall, never to the floor.


How to shorten doorframes: Position a lose plank facing down close to the doorframe and cut with a jamb saw.

Final touches: After removing all spacers, create waterproof installation by applying a 100% silicone sealant to the entire perimeter of the area installed. First fill all expansion spaces with 3/8" compressible PE foam backer rod and cover it with silicone sealant. Prior to installing the transitions moldings, apply silicone sealant to the portion of the transition molding that will be in contact directly with the laminate flooring. Install transition moldings and immediately wipe away any excess silicone sealant. Apply silicone sealant at connections to doorframes or any other fixed objects. Parkay floors recommends "Truper Transparent 100% Silicone Sealant", as ideal for your Mercury flooring installation.

Installation with an existing baseboard

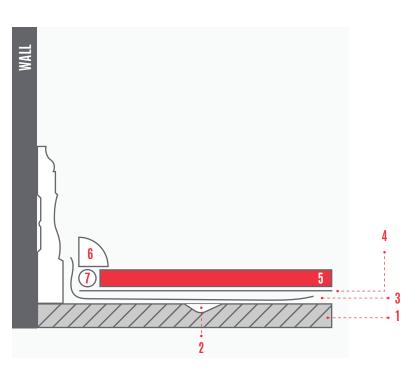

Installation without an existing baseboard

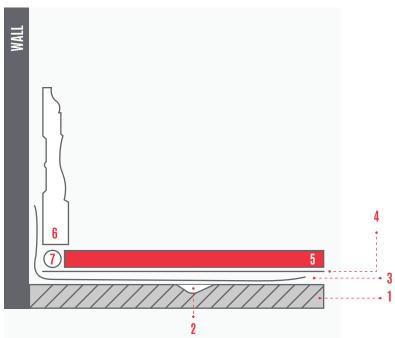

- 1 Concrete / Wood Sub-Floor
- 2 Leveler (if required)
- 3 6mil Poly Plastic Sheet (show 4' up
- the wall)
- 2mm to 3mm underlayment
- Mercury WPL Flooring
- 6 Quarter-Round
- 7 Siliconized Caulking

WARRANTY

Parkay Floors® grants to purchasers of Parkay Floors laminate flooring, valid from date of purchase, an additional warranty on the abrasion resistance of the surface of Parkay Floors laminate flooring. This warranty is in accordance with the following provisions. Your normal statutory rights are not affected:

CONDITIONS

Parkay Floors laminate flooring needs to be, both before and during its installation, checked fully for any kind of defects. Once installed, the flooring panels are deemed to be of an acceptable quality. Parkay Floors laminate flooring has to be installed in an expert manner, according to the installation instructions, in a dry area in accordance with its respective Utility Category. If installed in damp rooms Parkay Floors laminate floor is not covered by the warranty. Affected areas on Parkay Floors laminate floors have to be of an area that is at least 1 cm2, and easy to identify. In particular, where the decorative layer has been rubbed off completely. Effected areas on the Plank edges caused either by inappropriate use or maintenance, or especially mechanical stress are not covered by the warranty. To make a claim under the Warranty, Parkay Floors laminate flooring must have been treated according to the care instructions and regularly cleaned and maintained. Any warranty claims are to be submitted by the very latest within 30 days of the occurrence being noticed. This must be done in writing with the original proof of purchase. In order to assess the warranty claim, Parkay Floors shall have the right to inspect the affected area on site.

WARRANTIES

Once the claim on the Warranty is accepted, Parkay Floors undertakes to offer replacement material for the affected area. If the affected Flooring is no longer available, the buyer may select a substitute equivalent product from the current range of Parkay Floors. Given that there is an annual 10% use-related depreciation of the Parkay Floors Laminate Flooring, Parkay Floors will make the replacement of material, based on the corresponding annually reduced amount of the affected area. A liability for further or associated cost and damages, especially consequential - as with the installation, removal, transportation, and disposal of damaged flooring panels etc. - is excluded. This also applies to damages or compensation of any kind.

		LIVING	COMMERCE
GRAND SELECTION	HDF AC 5 / KL. 33	35 Years	5 Years
SWISS-LIFESTYLE	HDF AC 4 / KL. 32	25 Years	3 Years
SWISS-SOLID <i>Chrome</i>	HDF AC 5 / KL. 33	30 Years	5 Years
GIANT	HDF AC 5 / KL. 33	30 Years	5 Years
SWISS-NATURAL	HDF AC 4 / KL. 32	25 Years	3 Years
SWISS-ELITE	HDF AC 4 / KL. 32	25 Years	3 Years
KÖNIGSKLASSE	HDF AC 5 / KL. 32	30 Years	5 Years
SWISS-SYNCChrome	HDF AC 4 / KL. 32	25 Years	3 Years
SWISS-NOBLESSE Style	HDF AC 4 / KL. 32	20 Years	2 Years
SWISS-NOBLESSE V4	HDF AC 4 / KL. 32	20 Years	2 Years
SWISS-NOBLESSE	HDF AC 4 / KL. 32	20 Years	2 Years
SWISS-AUTHENTIC	HDF AC 4 / KL. 32	20 Years	20 Years
Mega	HDF AC 4 / KL. 32	20 Years	2 Years
SWISS-PRESTIGE	HDF AC 3 / KL. 31	15 Years	1 Year

PARKAY FLOORS

CS Global Services does hereby certify that an independent assessment has been conducted on behalf of:

For the following product(s):

Laminate:

BestValue up to 8.0mm PDL (EN15486), Grand Selection up to 14.0mm DPL (EN13329), Helvetic Floors Collection DPL up to 12.0mm (EN13329), Swiss Floor Collection up to 12.0mm DPL (EN13329)

The product(s) meet(s) all of the necessary qualifications to be certified for the following claim(s):

FloorScore®

Indoor Air Quality Certified to SCS-EC10.3-2014 v4.0

Conforms to the CDPH/EHLB Standard Method v1.2-2017 (California Section 01350), effective April 1, 2017, for the school classroom and private office parameters when modeled as Flooring.

Measured Concentration of Total Volatile Organic Compounds (TVOC): Less than/equal to 0.5 mg/m3 (in compliance with CDPH/EHLB Standard Method v1.2-2017)

Registration # SCS-FS-04446

Valid from: March 31, 2017 to December 31, 2017

SCS Global Services is currently the only certification body approved by the Resilient Floor Covering Institute (RFCI) to provide FloorScore® product certification; certified products are only listed on the SCS Green Products Guide, http://www.scsglobalservices.com/certified-green-products-guide.





Stanley Mathuram, PE, Vice President
SCS Global Services
2000 Powell Street, Ste. 600, Emeryville, CA 94608 USA

For service under this warranty or technical questions, please go to our website or contact your local retail.

