


OVERLAP STAIR NOSE


Overlap Stair Nose is designed with stylish functionality to accent a staircase or step.

Surface Material:
Extruded Foam PVC

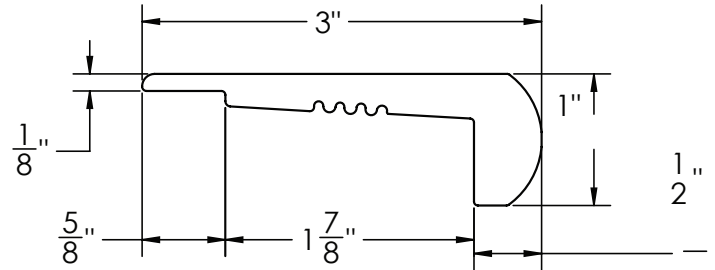

INSTALLATION - 2MM TO 7MM THICK FLOORS

- 1 Install the riser flush to the end of the Stair. Leave 1-5/8" (41mm) space between the flooring and the outer edge of the riser. Lay two lines of adhesive the length of the Stair.

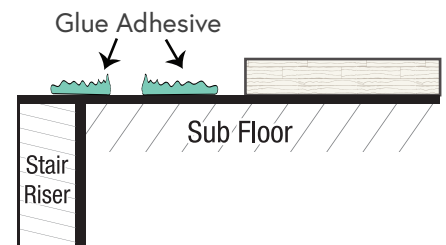

- 2 Line the Overlap Stair Nose up with the edges of the Stair and place the inside against the outside of the Stair Riser. Gently, but firmly, lower the edge of the Stair Nose onto the glue and the Flooring. Press forward and down to allow the glue to spread and adhere. Once you have the Stair Nose in place, gently adjust to make sure it is straight and level. As needed, gently tap with a rubber mallet to ensure the stairnose is seated as desired.

